

# SWEDX

User's Guide  
T0/T8/T9  
X0/X8/X9

[www.swedx.com](http://www.swedx.com)





## INDEX

|                                       |    |
|---------------------------------------|----|
| Introduction                          | 4  |
| Basic operation                       | 5  |
| Contents                              | 6  |
| Control buttons                       | 6  |
| Connections on the rear of the LCD-TV | 6  |
| Remote control buttons                | 7  |
| Basic Operation                       | 8  |
| Volume Control                        | 8  |
| OSD Menu Structure                    | 8  |
| OSD Menu Operation:                   | 8  |
| OPTION                                | 9  |
| Channel                               | 9  |
| Menu > Channel > Auto Scan            | 9  |
| Menu > Channel > ATV Manual Tuning    | 9  |
| Menu > Channel > Program Edit         | 10 |
| Menu > Picture                        | 11 |
| Menu > Picture > Picture Mode         | 11 |
| Menu > Picture > Color Temperature    | 11 |
| Menu > Picture > Aspect Ratio         | 11 |
| Menu > Picture > Noise Reduction      | 11 |
| Menu > Picture > Screen               | 11 |
| Menu > Sound > Menu Sound             | 11 |
| Menu > Sound > Sound Mode             | 11 |
| Menu > Sound > Balance                | 11 |
| Menu > Sound > Auto Volume            | 12 |
| Menu > Sound > Surround Sound         | 12 |
| Menu > Sound > SPDIF Mode             | 12 |
| Menu > Sound > EQ                     | 12 |
| Menu > Time                           | 12 |
| Menu > Time > Clock                   | 12 |
| Menu > Time > Off Time                | 12 |
| Menu > Time > On Time                 | 12 |
| Menu > Time > Sleep Timer             | 12 |
| Menu > Time > Auto Sleep              | 12 |
| USB Source                            | 13 |
| Remote Control Keys used in USB Mode  | 13 |
| Text-TV / Teletext                    | 14 |
| USB Media Player                      | 14 |
| TV base assembly with the TV          | 15 |
| Wall mount assembly with the TV       | 15 |
| Connect External Speakers             | 15 |
| Troubleshooting                       | 16 |
| Warranty and Service                  | 17 |
| Dead on Arrival (DOA)                 | 17 |
| How to get service                    | 18 |
| Limitation of liability               | 18 |

## Introduction

Thank you for buying SWEDX LCD-TV. Please read this manual thoroughly before operating the TV. Make sure the display was not damaged in transit. Should the TV be damaged, please contact your dealer and do not install it. Check that you have all the accessories according to the model.

## Safety precaution

- Do not place the TV on unstable places, from which it may fall off.
- Do not expose the TV to extreme temperature and humid environment.
- Avoid subjecting the TV to direct sunlight and other heat sources.
- Do not put the TV into any liquid.
- Do not put anything inside the TV, or place water container on top of the TV.
- In thunder rainy days (especially with lightning), please plug out the power plug and antenna plug.
- Do not step on the power cable, or tangle them together
- Avoid overload of the exterior electric outlet to prevent fire hazard of electric shock.
- Clean the TV with dry and soft cloth (without evaporative matter).
- If your TV is broken, do not repair it by yourself, but contact the maintenance personnel.
- If the remote control is left unused for a long time, please take the batteries out and store them in dry places.
- Avoid dropping the remote control.
- If the LCD TV is installed for exhibition purpose, please do not place the overheated part on the ground or carpet to prevent accident.

Please install the TV at proper position, such as wall or ceiling. Please install it under the guidance of professional staff. (When used or exhibit, please do not place the TV horizontally or vertically on the ground.)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should avoid from water drops and things that fill with liquid, such as vases, cannot be placed on this equipment.

This equipment is predetermined to work constantly (unless adding switch on this equipment) Please disconnect the power cord if this equipment will not be used for a long time.

## Precautions When Displaying a Still Image

A still image may cause permanent damage to the TV screen.

- Do not display a still image on the LCD panel for more than 2 hours as it can cause screen image retention.  
This image retention is also known as "screen burn".  
To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.
- Watching the LCD TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and center of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause a similar effect to the screen. Damages caused by the above effect are not covered by the Warranty.
- Displaying still images from Video games and PC for longer than a certain period of time may produce partial after-images.  
To prevent this effect, reduce the 'brightness' and 'contrast' when displaying still images.

## Basic operation

- Use AC 100-240V 50-60 Hz power outlet for the TV power supply.
- If the screen of TV is not on, please press the power button on the remote control or on the TV.
- If you want to shut off the TV temporary, please press the power button on the remote control or on the TV.
- If you want to shut off the TV completely, please switch off the power ON/OFF.
- In TV/AV state, the TV will enter idle state if there is no signal input within 3 minutes.
- In PC state, the TV will enter idle state if there is no signal input within 2 minutes.
- The setting and tuning of picture and sound will be saved when the TV is shut off, which will be working in the pre-shut off state when the TV is turn on again.
- If PC signal source is used, please first set the resolution of the PC display card as the following modes: (1024\*768 60 Hz, 800\*600 60 Hz, 640\*480 60 Hz)
- If there is line-by-line output of the signal used by the user, signal source with line-by-line output is recommended.

## Preparation

- Put the TV on a stable surface.
- Do not fix the TV with others fixations than those provided or suggested by the manufacturer.
- If you have a wall mount, check that it is steady.
- Do not place any material on the TV.
- Do not block or cover the ventilation openings on the TV.
- The TV must be plugged with a tension source of 110-240 volts and 50-60 Hz.
- Power cord and cables must be properly routed and protected to prevent from stepping on them.
- Keep the power cord away from any heat source. Possible fire hazard.

## Heating sources and humidity

 
- Keep the TV dry and away from humidity.
- Keep the TV away from heat sources.

## Cleaning and maintenance

- Unplug the TV before cleaning it. Do not use solvents or liquids to clean the TV.
- Only clean the TV with a soft and dry cloth.
- In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or others incidents. Please contact a technical authorized by SWEDX brand.

## Departure in holidays

- Unplug the LCD-TV during lightning storms or when unused for long periods of time.

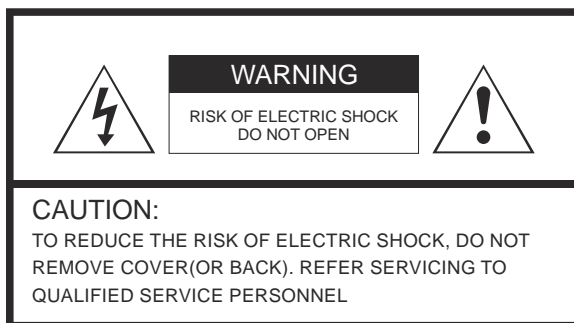


## WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.


## Contents

 Included items in SG-series:

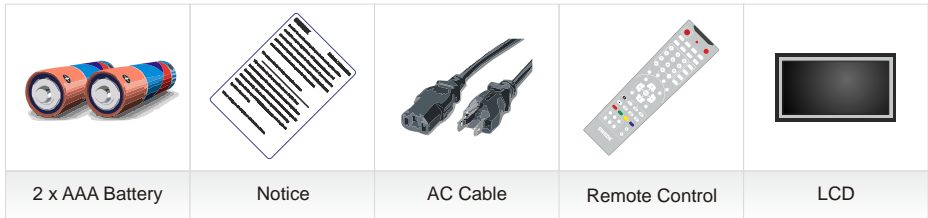


## Control buttons:

 The control buttons's outlook on your SWEDX LCD-TV is the following:

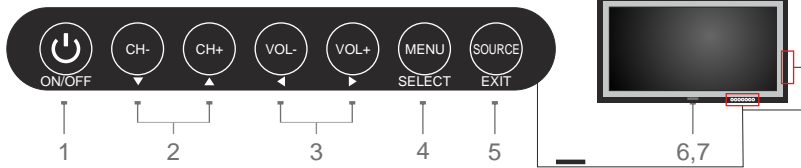

1. ON/OFF: Power switch ON/OFF
2. CH+/-: Zap the channels / Navigate the OSD menu
3. Vol+/-: Decrease and increase the audio volume / Navigate the OSD menu / Adjust values in the OSD
4. Select/Menu: Activate the OSD menu / Select in the OSD menu or Sources
5. Source/Exit: Activate the input source menu / Exit the OSD menu
6. LED: Power indicator
7. IR: Remote control Infra Red receiver

## Connections on the rear of the LCD-TV

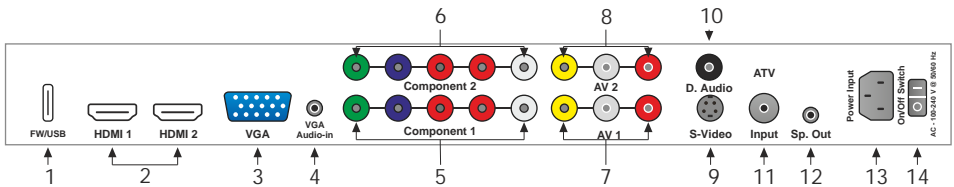 


1. USB/FW: USB Media Player / Firmware update
2. HDMI 1&2: HDMI 1&2 input
3. VGA: PC (VGA) input
4. VGA Audio: Audio-input of PC/VGA
5. Component 1: Component 1 input
6. Component 2: Component 2 input
7. AV 1: Composite video (AV 1) input
8. AV 2: Composite video (AV 2) input
9. S-Video: S-Video input
10. D.Audio: Digital Audio output (Coaxial)
11. ATV: Aerial input for analog channels
12. Sp. Out: Speakers output
13. S-Video: Power Input 110-240 V @ 50-60Hz
14. On/Off: Main On/Off Switch

## Remote control buttons

 1. On/Off button
2. Turn Off/On TV speakers
3. Enter sleep mode in certain chosen time
4. Select audio mode
5. Picture size selection
6. Number buttons for direct channel access
7. One/Two-digit channel selection
8. Shortcut to HDMI1,2 inputs.
9. Shortcut to PC input
10. Menu display. In OSD sub-menu press to access previous menu
11. Navigation button *UP*
12. Confirm/activate button
13. Navigation/adjust button *LEFT*
14. Navigation button *DOWN*
15. Shortcut to Component
16. Activate Teletext
17. Alter Teletext mix
18. Teletext cancel
19. Teletext index
20. Fast-text topic selection in Teletext *RED*
21. Fast-text topic selection in Teletext *GREEN*
22. List TV-channels
23. N/A for this model
24. N/A for this model
25. N/A for this model
26. Display favorite channels
27. Activate/alter subtitles in USB movieplayer
28. Flash when a button is pressed
29. Available sources selection

30. Display information about the current source
31. Picture freeze
32. Alter sound mode
33. Alter picture mode
34. Volume increase
35. Volume decrease
36. Next channel. When the channel list is displayed, it scrolls down to next page in the list.
37. Previous channel. When the channel list is displayed, it scrolls up to previous page in the list.
38. N/A for this model
39. Shortcut to ATV
40. Exit the OSD
41. Navigation/adjust button *RIGHT*
42. N/A for this model
43. Hold Teletext
44. Teletext size selection
45. Reveal Teletext
46. Display time in Teletext
47. Fast-text topic selection in Teletext *Blue*
48. Fast-text topic selection in Teletext *Yellow*
49. N/A for this model
50. N/A for this model
51. N/A for this model
52. N/A for this model

Buttons 20,21,47,48 are used with the USB Media Player.

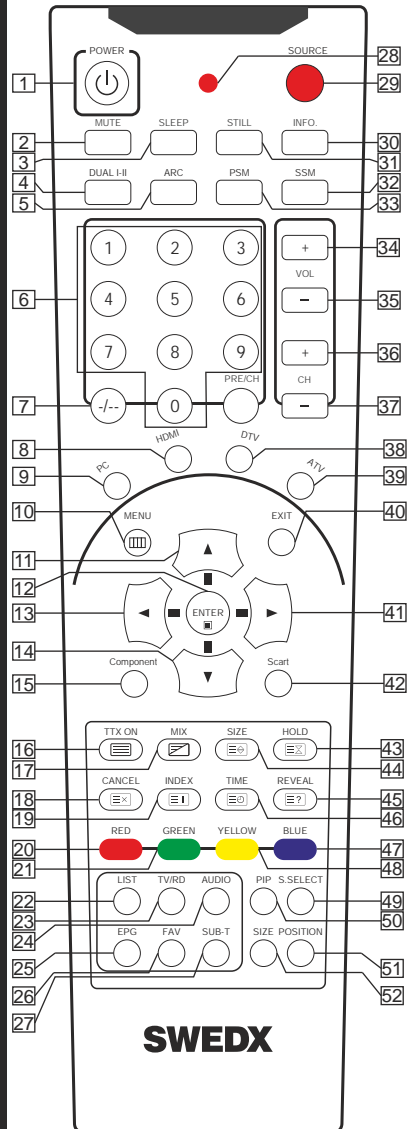

## Basic Operation

### Turning LCD-TV On And Off

Press Power button on the remote control or the On/Off button on the control buttons. The LCD will turn on and will be ready to be used.

### Select Source

Press Source button on the remote control. Then you can see the source list menu shown to the right. Press Navigation Up/down button on the remote control to select the source and confirm by pressing Enter.



## Volume Control

Press VOL+ / VOL- button on the remote control to adjust the volume level.

Press MUTE button on the remote control when you need to mute the sound.



## OSD Menu Structure

- OSD (On Screen Display) allows users to control or adjust various features and settings in accordance with his/her preferences.
- Press the MENU button on the remote control to see the main OSD menu.

### Example of OSD Menu:

- Main Menu: Press the MENU button on the remote control to enter the main OSD menu.



First, select Main menu item you need with the buttons ? & ? .

To select a main menu items, just press Enter or Navigation button on the Remote Control.

- Sub Menu: Each menu item has its own sub menu items to set.
- Sub Menu items:
  - A: If there is no value to adjust it means there is a sub menu which you can access by pressing Enter and modify the menu values. Select sub-menu item with & buttons on the remote control and press Enter button to enter the submenu or change the value.
  - B: If there is no ? part, the item has adjustable values. Use the ? & ? buttons to adjust the values.
  - C: If the sub-menu item is grey colored, it means this item is not available in the particular mode.

## OSD Menu Operation

Press **MENU** button on the remote control to access the OSD Menu. Pressing the same button again will move you backward in the OSD structure.

Press **ENTER** button to confirm/select.

Use **LEFT & RIGHT** buttons to navigate or change the parameters of the current sub-menu.

Use **UP & DOWN** buttons to navigate in the OSD Menu.

Press **EXIT** button to exit the OSD Menu.



## OPTION

In this Menu you can choose the setup settings for your TV.

OSD Language: Choose the OSD language

OSD Duration: Choose the OSD Menu duration in time.

Blue Screen: Choose if the LCD will display a blue background screen when no signal is detected.

Restore Settings: This function will restore the TV to the original settings.



## CHANNEL

In this Menu you can search for TV-channels manually or automatically.

Search for analog TV-channels manually or automatically.

Manage the TV channels such as deleting, adding to favourites, skipping and locking.

### Menu > Channel > Auto Scan

Choose **Auto Scan** to start searching for TV-Channels (analog). When you choose **Auto Scan** TV will start searching for available channels. When the TV has finished searching it will store the available channels automatically.



*Press Menu*

*Choose Channel Menu*

*Press Enter or Move down with the down arrow*

*Press Enter to start Auto Scanning*

### Menu > Channel > ATV Manual Tuning

Choose **ATV Manual Tuning** to start searching for TV-Channels (analog) manually.

*Press Menu*

 
*Choose Channel Menu*

*Press Enter or Move down with the down arrow*

*Choose ATV Manual Tuning*

*Choose which channel to save too*

*Choose Search to start manual search. When a TV channel is found, do a fine tuning if necessary and thereafter press RED button to save the TV channel.*

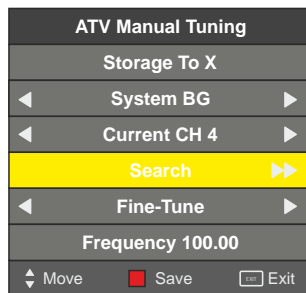

To access the stored channels press **LIST** button on the remote control.

### **Menu > Channel > Program Edit**

In **Program Edit Menu** you can:

Delete a channel (*use Red button*)

Move a channel (*press Yellow button, choose new position, press Enter*)

Skip a channel (*use Blue button*)

Rename a channel (*press Green button, change the channel name using the arrow buttons*)

Add a channel to favorite list (*use FAV button*)

To access **Program Edit Menu** do the following

*Press Menu. Choose Channel Menu*

*Press Enter or Move down with the down arrow*

*Choose Program Edit*

| CH.NAME | SKIP | FAV | TYPE |
|---------|------|-----|------|
| 0 C-05  |      | ♥   | ATV  |
| 1 C-06  | ⊘    |     | ATV  |
| 2 C-07  |      |     | ATV  |
| 3 C-08  |      |     | ATV  |
| 4 C-09  |      |     | ATV  |
| 5 C-10  |      |     | ATV  |

⬇ Select     OK     Menu     Delete     Move     Skip     Rename     FAV

## Menu > Picture

Use the Picture menu to adjust the picture settings to meet your requirements:

### Menu > Picture > Picture mode

 
Choose between predefined settings:

**Standard:** Suitable for a normal room

**Dynamic:** Suitable for a bright room

**Movie:** Suitable for a dark room

**User:** In Personal mode you can adjust the Contrast, Brightness, Colour, Sharpness and Tint to meet your own requirements.

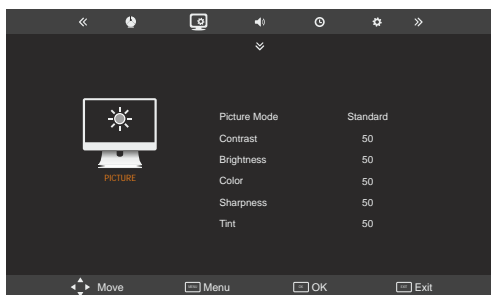


### Menu > Picture > Color Temperature

Choose between predefined settings (User, Cool, Medium, Warm). In User mode you can adjust the Colors Red, Green and Blue.

### Menu > Picture > Aspect Ratio

Choose the desired Aspect Ratio. Available options are Just Scan, 16:9; 4:3, Zoom1, Zoom2.

 *In PC Mode, only "16:9" and "4:3" mode can be adjusted.*

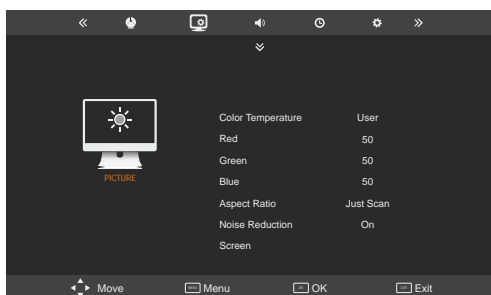

### Menu > Picture > Noise Reduction

Choose to activate noise reduction. Available options are On and Off.

*If the broadcast signal received by your TV is weak, you can activate the Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.*

### Menu > Picture > Screen (only in VGA)

 
When the TV is in PC-Mode additional settings are available for PC-Setup.

Horizontal Pos.: Adjust the PC's screen positioning horizontally

Vertical Pos.: Adjust the PC's screen positioning vertically

Size: Adjust the screen size/clock

Phase: Adjust the signal phase

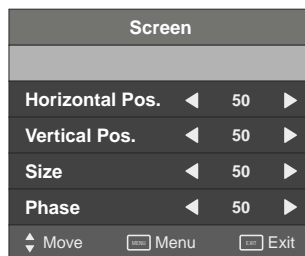

## Menu > Sound

Use the Sound menu to adjust the sound settings to meet your requirements:

### Menu > Sound > Sound Mode

Choose between predefined settings:

**Standard:** Suitable for normal programs

**Movie:** Suitable for movies

**Sport:** Suitable for sport programs

**Music:** Suitable for music program

**User:** In Personal mode you can adjust the Treble and Bass to meet your own requirements.



### Menu > Sound > Balance

Adjust the sound output balance between left and right speaker.

### **Menu > Sound > Auto Volume**

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

### **Menu > Sound > Surround Sound**

 
When ON it delivers a compelling, virtual surround sound experience through any two-speaker playback system, including internal television speakers. It is fully compatible with all multichannel formats.

### **Menu > Sound > SPDIF Mode**

Choose the output mode for the SPDIF signal. Choose between Auto or PCM.

### **Menu > Sound > EQ**

Choose the equalizers to do fine tuning for the audio output.

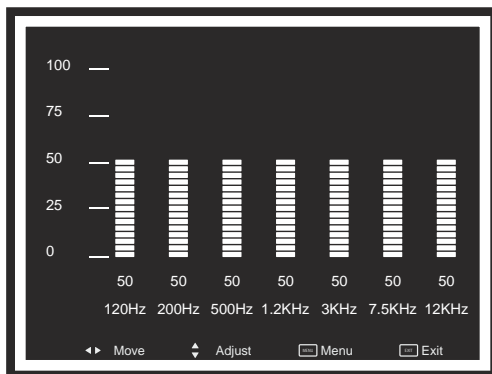

### **Menu > Time**

Use the Time menu to set the TV time and adjust some other settings related to time settings.

### **Menu > Time > Clock**

Adjust the time of the TV.

### **Menu > Time > Off Time**

Set a certain time to turn **off** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday**.



### **Menu > Time > On Time**

Set a certain time to turn **on** the TV automatically. The available time intervals are **Once, Everyday, Mon-Fri, Mon-Sat, Mon-Sun** and **Sunday**.

### **Menu > Time > Sleep Timer**

Set the TV to turn off after a certain time. The time intervals are **240, 180, 120, 90, 60, 30, 20** and **10 min**.

### **Menu > Time > Auto Sleep**

When set to ON the TV will turn off automatically if no input signal is detected otherwise the TV will remain ON even if no input signal is detected.

## USB Source

 
This product is equipped with high end USB Media Player. It is capable of playing music, and movies (up to 1080p and with subtitle support), and display photos or text documents.

To Enter USB mode

Press Source

Choose *USB* using the arrow keys

Press Enter

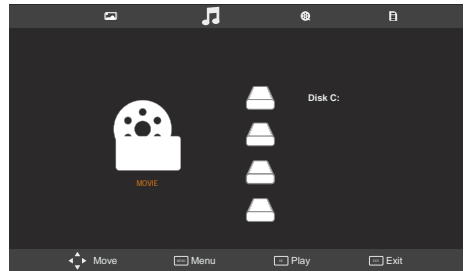

In USB mode you can choose between:

**Photos:** Enables you to display several formats of photos and images

**Music:** Enables you to play several formats of music and audio files

**Movie:** Enables you to play several formats of movies and video files

**Text:** Enables you to display TXT files

## Remote Control Keys used in USB Mode



The INFO button will display available controllers where it is possible to i.e. rotate an image. The controllers may vary depending on the USB mode.



The CANCEL button will **fast backward** played file (**FB <<**). Press several times will increase the speed.



The INDEX button will **fast forward** the played file (**FF >>**). Press several times will increase the speed.



The RED button will act as PLAY key (**>**) and PAUSE (**||**). Press it to start playing the file. Press it again to pause the playing.



The GREEN button will act as PREVIOUS key (**I<<**). Press it to jump back to the previous title.



The YELLOW button will act as NEXT key (**>I**). Press it to jump to the next title.



The BLUE button will act as STOP key. Press it to stop the playing and return to files screen.



The AUDIO button will alter audio track (if several audio tracks are available in the played file).



The SUB-T button will alter the subtitles or turn it off (if several subtitles languages are available in the played file).

## **Text-TV / Teletext**

Most television stations provide written information services via Teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

**TTX ON:** Press TTX ON to enter Text-TV  
Press TTX ON to exit Text-TV

**INDEX:** Used to display the index (contents) page at any time while you are viewing teletext.

**SIZE:** Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.

 
**REVEAL:** Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.

**MIX:** Press to activate teletext mode after selecting the channel providing the teletext service. Press it twice to overlap the teletext with the current broadcasting screen.

**HOLD:** Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.

**CANCEL:** Used to display the broadcast when searching for a page.

**Red/Green/Yellow/Blue:** If the FASTTEXT system is used by a broadcasting company, the different topics covered on a teletext page are color coded and can be selected by pressing the colored buttons. Press one of them corresponding to the required. The page is displayed with other colored information that can be selected in the same way. To display the previous or next page, press the corresponding colored button.

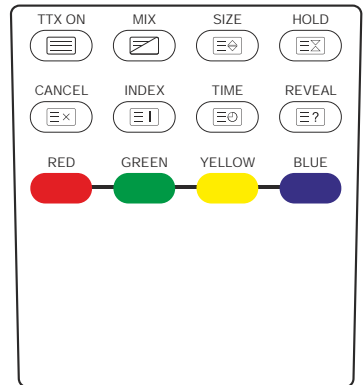


### **TV base assembly with the TV**

The TV base for the camo TV can be purchased from your dealer or [www.swedx.com](http://www.swedx.com)

To assemble the base with the TV review the illustration to the right. Use the screws included in the base box.

 Notice: ***Make sure to avoid any damages to the LCD panel when you assemble the TV base.***

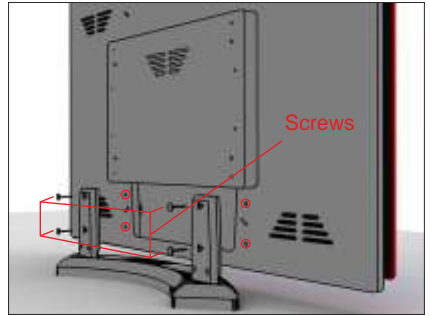


### **Wall mount assembly with the TV**

SWEDX offers several wall mount devices for the camo TV which can be purchased from your dealer or [www.swedx.com](http://www.swedx.com)


To assemble the wall mount with the TV review the illustrations to the right. Use the screws included in the wall mount box.

 Notice: ***Make sure to avoid any damages to the LCD panel when you assemble the wall mount.***

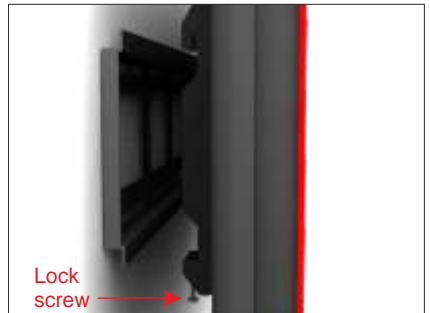

### **Connect External Speakers**

 Connect the external speakers to the speakers output located on the backside of the LCD-TV, See page 6.

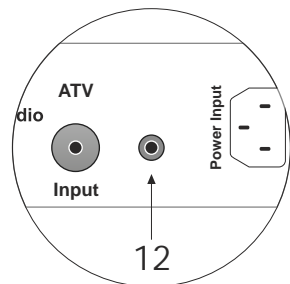

## Troubleshooting

Before contacting SWEDX service or your dealer, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of your set and contact your local dealer.

|  |   |
|--|---|
| No sound or picture                                    | Check that the mains lead has been connected to a wall socket.<br>Check that you have pressed the POWER button on the front of the TV.<br>Check the picture contrast and brightness settings.<br>Check the volume.  |
| Normal picture but no sound                            | Check the volume.<br>Check whether the MUTE button has been pressed on the remote control.  |
| No picture or black and white picture                  | Adjust the color settings.<br>Check that the broadcast system selected is correct.  |
| Sound and picture interference                         | Try to identify the electrical appliance that is affecting the set and move it further away.<br>Plug your set into a different mains socket.  |
| Blurred or snowy picture, distorted sound              | Check the direction, location and connections of your aerial.<br>This interference is often due to the use of an indoor aerial.   |
| Remote control malfunctions                            | Replace the remote control batteries.<br>Clean the upper edge of the remote control (transmission window).<br>Check the battery terminals.<br>Turn off the TV and unplug the AC cable from the wall socket and then plug the AC cable and turn on the TV. |
| "No signal" message is displayed.                      | Check that the signal cable is firmly connected to the source input.<br>Check that the source is turned on.   |
| On PC mode, "Not Supported Mode" message is displayed. | Check the maximum resolution and the frequency of the video adapter. For HD models the recommended resolution is 1366x768 and for Full HD models the recommended resolution is 1920x1080.   |
| The image is too light or too dark.                    | Adjust the Brightness and Contrast.   |
| Pixel Mapping  | It is recommended to choose aspect ratio JUST SCAN to achieve pixel mapping in VGA and HDMI modes.  |

## **Warranty and Service**

The following terms apply only to new "in the original carton" SWEDX products marketed and distributed by SWEDX, which are purchased and used by the original consumer purchaser.

Depending on the model, your terms and conditions may be different from those shown below, and this information is subject to change without prior notice. Unless specifically stated otherwise, used and reconditioned products that are resold have no warranty from SWEDX and are considered sold "AS-IS", however, the selling dealer may offer additional service options.

### **Warranty for SWEDX products:**

Check with your dealer for the warranty period.

### **What the warranty covers:**

SWEDX warrants your SWEDX display(s) against defects in material and workmanship during the warranty period from SWEDX factory delivery date shown in the shipping documents. If a product proves to be defective in material or workmanship during the warranty period, SWEDX will, at its sole option repair or replace the product with a similar product, provided the purchaser adheres to certain return authorization procedures and guidelines. SWEDX reserves the right to charge customer in case of warranty conditions not are fulfilled.

### **Who the warranty protects:**

This warranty is valid only for the first purchaser.

### **What the warranty does not cover:**

1. Any product which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
  - A. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - B. Repair or attempted repair by anyone not authorized by SWEDX.
  - C. Any damage of the product due to shipment.
  - D. Removal or installation of the product.
  - E. Causes external to the product, such as electric power fluctuations or failure.
  - F. Use of supplies or parts not meeting SWEDX specifications.
  - G. Normal wear and tear.
  - H. Any other cause which does not relate to a product defect.
3. Cosmetic damage by purchaser, such as markings, discoloration, scratches, dents, anti-theft devices markings, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module.
5. No Defect Found (product returned to SWEDX as defective but failure is not duplicated by SWEDX's test method.)
6. The product is not in accordance with the fault in the application
7. Timber is a lifelike natural material which can cause some little changes in the precision of the produced product such as small openings line beside the connecting point and some other small changes which are out of SWEDX control and don't make any effect for the product functionality.

### **Dead on Arrival (DOA)**

If the product fails within the manufacturer's DOA period, a replacement product will be offered.

### **Before contacting us:**

In many cases, your TV may not need repair. Before you contact us, please consult the troubleshooting section in your user's manual or SWEDX's FAQ web pages at <http://www.swedx.com> to see if you can easily remedy the problem yourself.

**How to get service:**

For information on obtaining warranty service, contact SWEDX dealer (the place where you bought your product) in first choice. If for any reason you can not contact your dealer, please contact SWEDX Customer Service by visiting <http://www.swedx.com>.

**SWEDX technical support services:**

During the period of product warranty, we support your basic configuration, setup and troubleshooting questions, and when required, we provide you with all instructions on how to return your product for repair. For support inquiries, please visit <http://www.swedx.com>.

SWEDX reserves the right to make final decisions regarding problem determination and the appropriate service option. Exchange units assume the remaining warranty of the original product. Please refer to your SWEDX Limited Warranty Statement for complete terms and conditions, as some models have other terms and conditions. Some limitations and restrictions apply and these programs are subject to change without prior notice.

**Limitation of liability**

If your SWEDX product fails to work as warranted above, your sole and exclusive remedy shall be repaired or replaced. SWEDX's maximum liability under this limited warranty is expressly limited to the lesser of the price you have paid for the product or the cost of repairing or replacement of any hardware components that malfunction in conditions of normal use. SWEDX is not liable for any damages caused by the product or the failure of the product to perform, including any lost profits or savings or special, incidental, or consequential damages. SWEDX is not liable for any claim made by a third party or made by you for a third party.

This limitation of liability applies whether damages are sought, or a claim made, under this limited warranty or as a tort claim (including negligence and strict product liability), a contract claim, or any other claim. This limitation of liability cannot be waived or amended by any person. This limitation of liability will be effective even if you have advised SWEDX.

**SWEDX**  
on *your* terms

# SV88T8

## SWEDX TV-Table

